


Measure & fitting your Horseware Rug

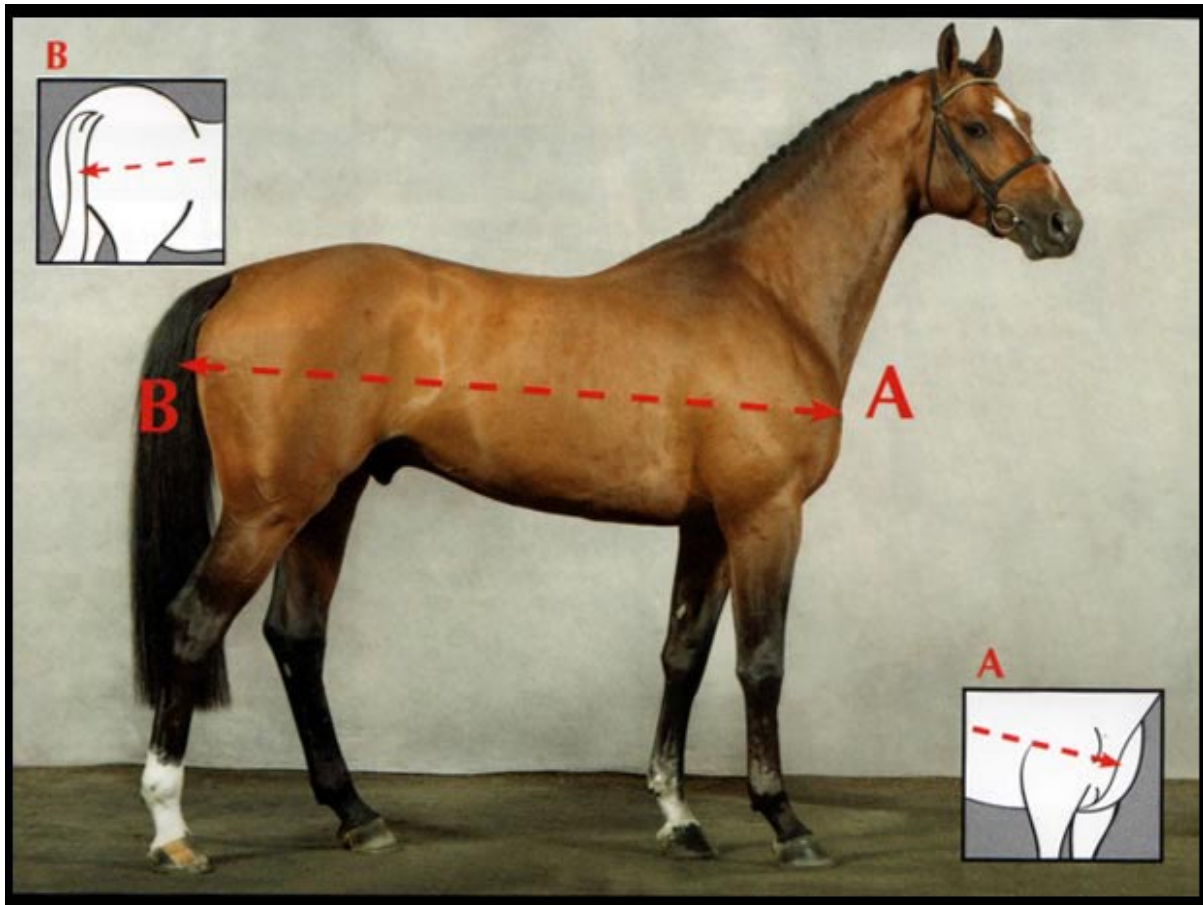

How to measure the correct size of rug for your horse

- Measure from (A) at the centre point of the chest, over the high point of the shoulder, and to (B) at the centre of the tail.
- Turnout Rugs : Subtract 4 inches
- Stable Rugs : Subtract 6 inches

How to fit your Horseware Rug

- Make sure that the tail is lifted over the fillet strap and that the strap is securely attached on both sides. This will prevent the rug from blowing forward.
- Where possible pull the tail through the strapping on the inside of the tail flap.
- When closing the surcingles on the rug use the following order
 - Middle
 - Cross over the two outer surcingles
- Make sure the surcingle hangs at least 10cm – 20cm below the horses belly.

Horseware Rug Size Conversion Chart

Measurement from (A) to (B)			EU Back seam equivalent
cm	inches	Feet	cm
114	45	3'9	75
122	48	4'0	80
130	51	4'3	85
137	54	4'6	90
145	57	4'9	95
152	60	5'0	100
160	63	5'3	110
168	66	5'6	115
175	69	5'9	125
183	72	6'0	130
191	75	6'3	140
198	78	6'6	145
206	81	6'9	155
213	84	7'0	160
221	87	7'3	165
229	90	7'6	170

Horseware Hood Size Conversion Chart

Hood	XXXS		XXS	XS			S	
Size (Feet)	3'9	4'0	4'3	4'6	4'9	5'0	5'3	5'6
Hood	M			L			XL	
Size (Feet)	5'9	6'0	6'3	6'6	6'9	7'0	7'3	7'6